


# Wiring Diagram Type 911

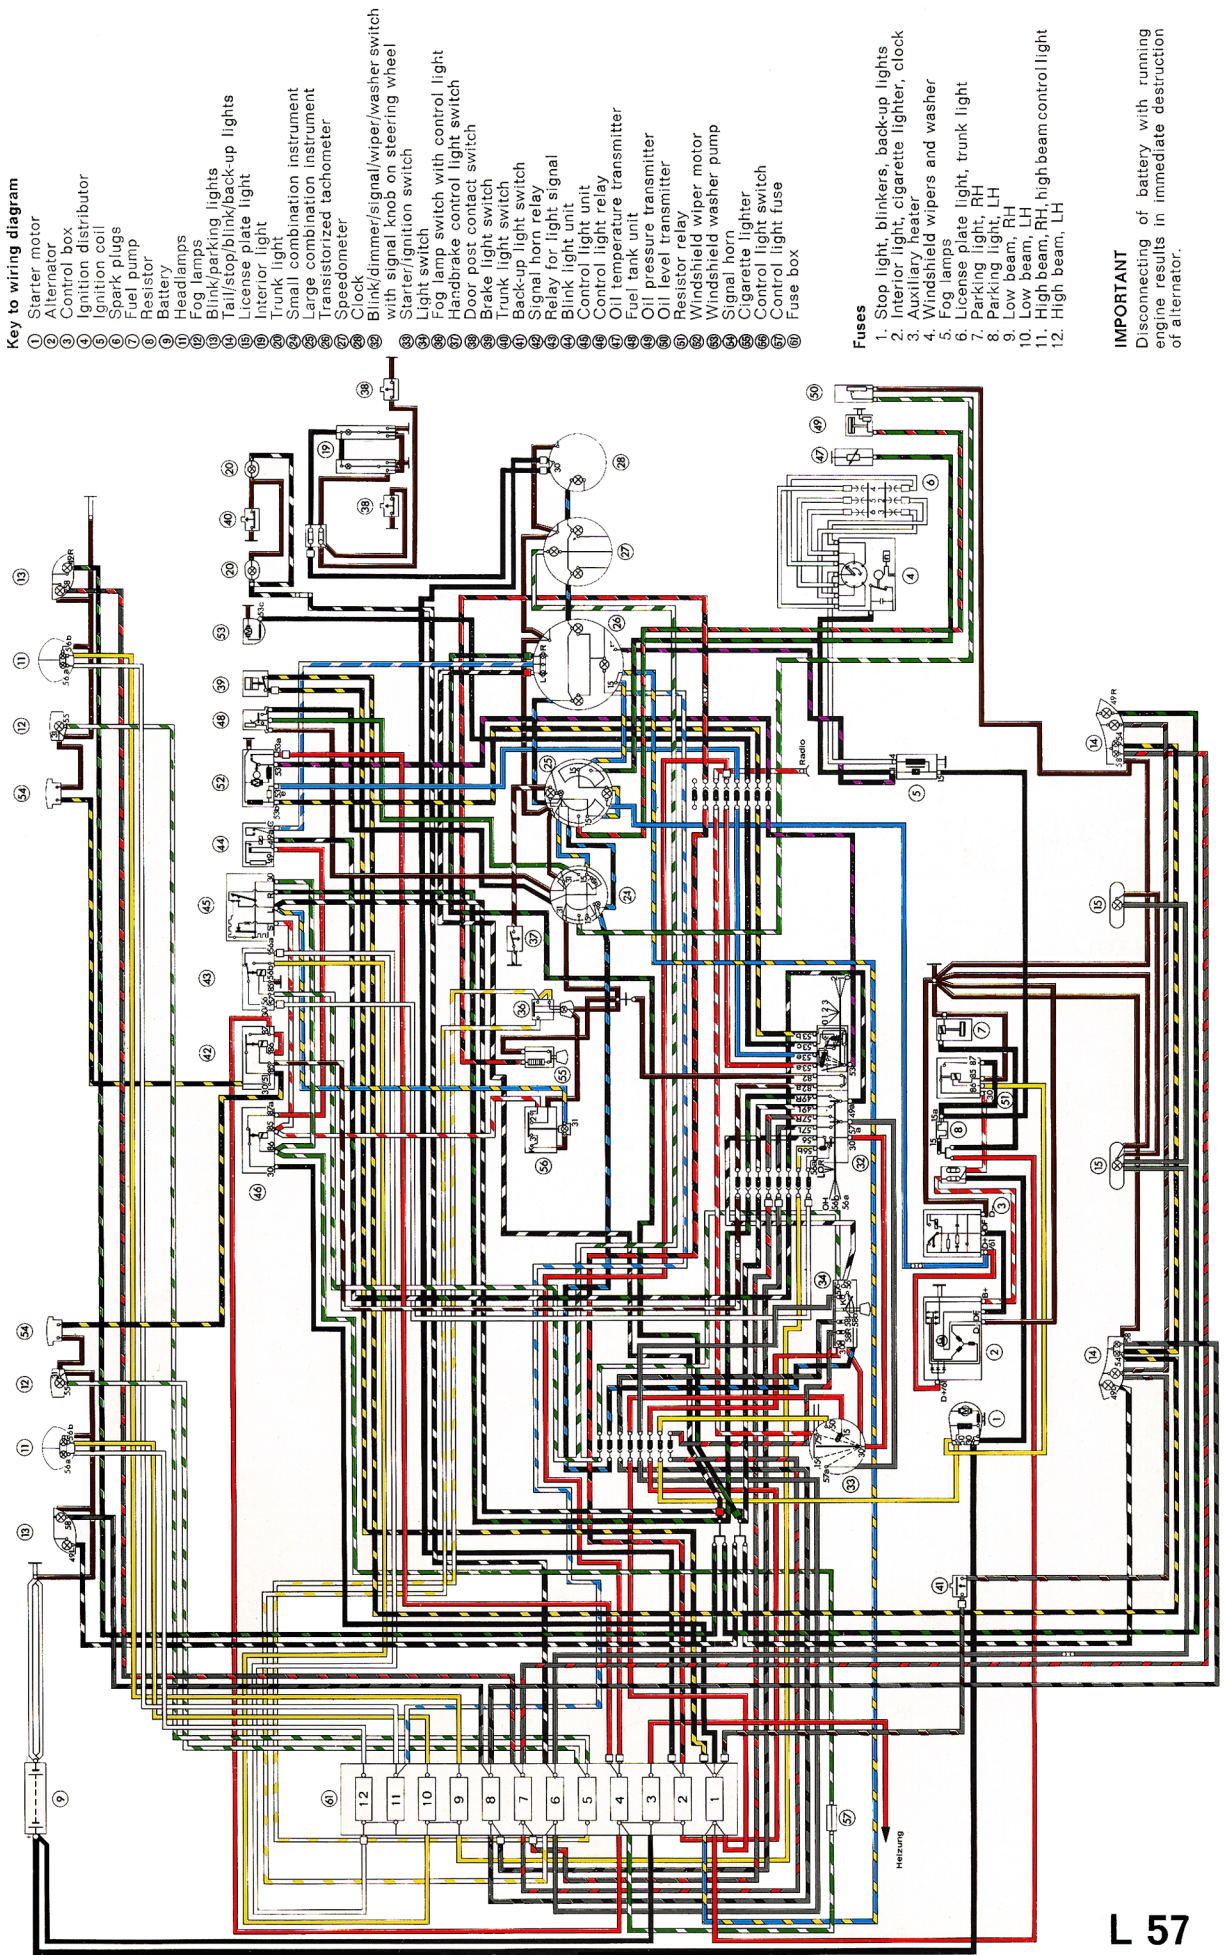

**Key to wiring diagram**

- ① Starter motor
- ② Alternator
- ③ Control box
- ④ Ignition distributor
- ⑤ Ignition coil
- ⑥ Spark plugs
- ⑦ Fuel pump
- ⑧ Resistor
- ⑨ Battery
- ⑩ Headlamps
- ⑪ Fog lamps
- ⑫ Blink/parking lights
- ⑬ Tail/stop/blink/back-up lights
- ⑭ License plate light
- ⑮ Interior light
- ⑯ Trunk light
- ⑰ Small combination instrument
- ⑱ Large combination instrument
- ⑲ Transistorized tachometer
- ⑳ Speedometer
- ㉑ Clock
- ㉒ Blink/dimmer/signal/wiper/washer switch with signal knob on steering wheel
- ㉓ Starter/ignition switch
- ㉔ Light switch
- ㉕ Fog lamp switch with control light
- ㉖ Handbrake control light switch
- ㉗ Door post contact switch
- ㉘ Brake light switch
- ㉙ Trunk light switch
- ㉚ Back-up light switch
- ㉛ Signal horn relay
- ㉜ Relay for light signal
- ㉝ Blink light unit
- ㉞ Control light unit
- ㉟ Control light relay
- ㊱ Oil temperature transmitter
- ㊲ Fuel tank unit
- ㊳ Oil pressure transmitter
- ㊴ Oil level transmitter
- ㊵ Resistor relay
- ㊶ Windshield wiper motor
- ㊷ Windshield washer pump
- ㊸ Signal horn
- ㊹ Cigarette lighter
- ㊺ Control light switch
- ㊻ Control light fuse
- ㊼ Fuse box

**Fuses**

- 1. Stop light, blinkers, back-up lights
- 2. Interior light, cigarette lighter, clock
- 3. Auxiliary heater
- 4. Windshield wipers and washer
- 5. Fog lamps
- 6. License plate light, trunk light
- 7. Parking light, RH
- 8. Parking light, LH
- 9. Low beam, RH
- 10. Low beam, LH
- 11. High beam, RH, high beam control light
- 12. High beam, LH

**IMPORTANT**  
Disconnecting of battery with running engine results in immediate destruction of alternator.