


# Wiring Diagram Type 911 S

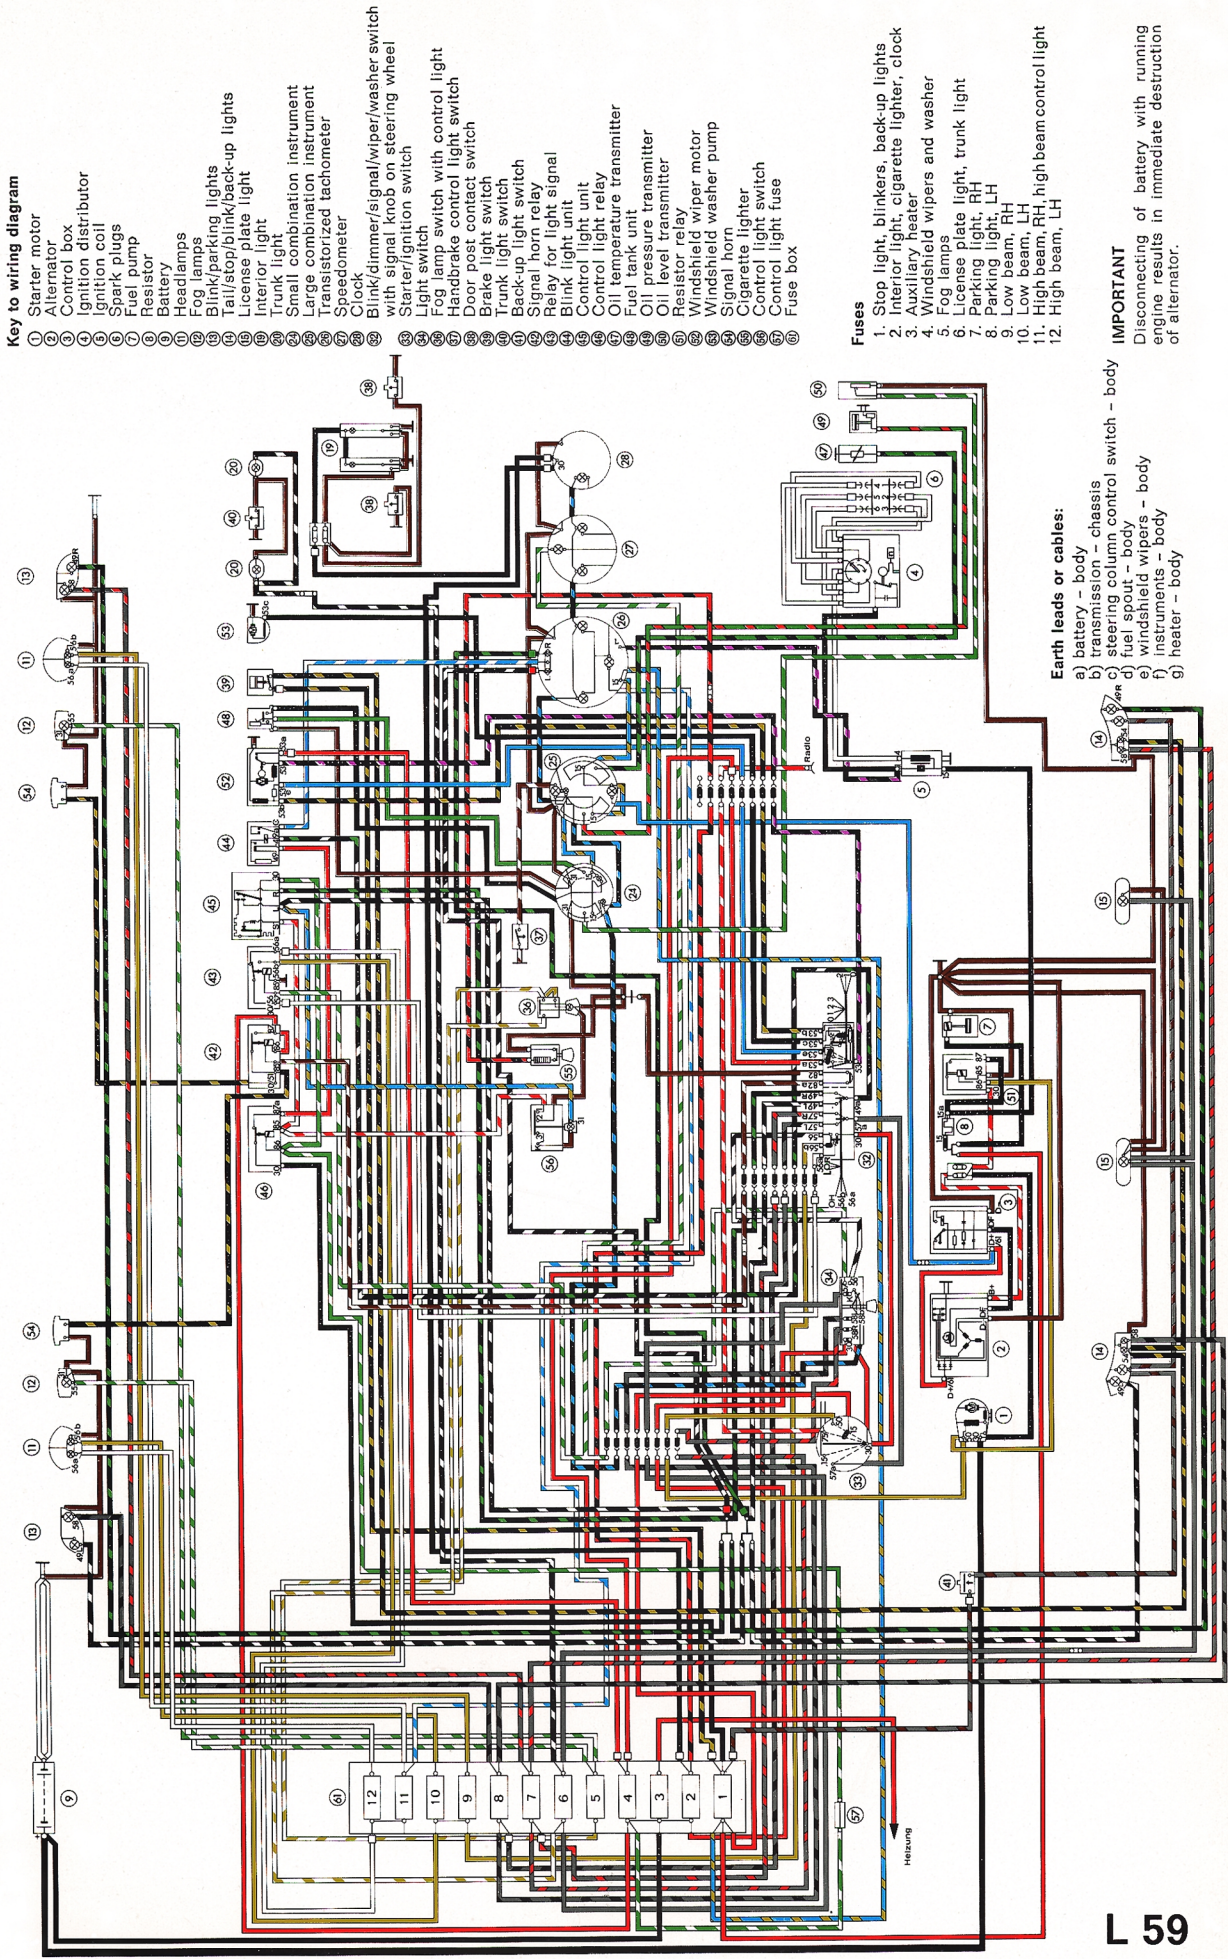

## Key to wiring diagram

- 1 Starter motor
- 2 Alternator
- 3 Control box
- 4 Ignition distributor
- 5 Spark plug
- 6 Fuel pump
- 7 Resistor
- 8 Battery
- 9 Headlamps
- 10 Fog lamps
- 11 Blink/parking lights
- 12 Tail/stop/blink/back-up lights
- 13 License plate light
- 14 Interior light
- 15 Trunk light
- 16 Small combination instrument
- 17 Large combination instrument
- 18 Transistorized tachometer
- 19 Speedometer
- 20 Clock
- 21 Blink/dimmer/signal/wiper/washer switch with signal knob on steering wheel
- 22 Light switch
- 23 Fog lamp switch with control light
- 24 Handbrake control light switch
- 25 Horn contact switch
- 26 Brake light switch
- 27 Back-up light switch
- 28 Signal horn relay
- 29 Relay for light signal
- 30 Blink light unit
- 31 Control light unit
- 32 Oil temperature transmitter
- 33 Fuel tank unit
- 34 Oil pressure transmitter
- 35 Oil level transmitter
- 36 Resistor relay
- 37 Windshield wiper motor
- 38 Windshield washer pump
- 39 Signal horn
- 40 Cigarette lighter
- 41 Control light switch
- 42 Control light fuse
- 43 Fuse box

## Fuses

1. Stop light, blinkers, back-up lights
2. Interior light, cigarette lighter, clock
3. Auxiliary heater
4. Windshield wipers and washer
5. Fog lamps
6. License plate light, trunk light
7. Parking light, RH
8. Parking light, LH
9. Low beam, RH
10. Low beam, LH
11. High beam, RH, high beam control light
12. High beam, LH

## IMPORTANT

Disconnecting of battery with running engine results in immediate destruction of alternator.

## Earth leads or cables:

- a) battery - body
- b) transmission - chassis
- c) steering column control switch - body
- d) fuel spout - body
- e) windshield wipers - body
- f) instruments - body
- g) heater - body