


# Wiring Diagram Type 911 E, 911 S

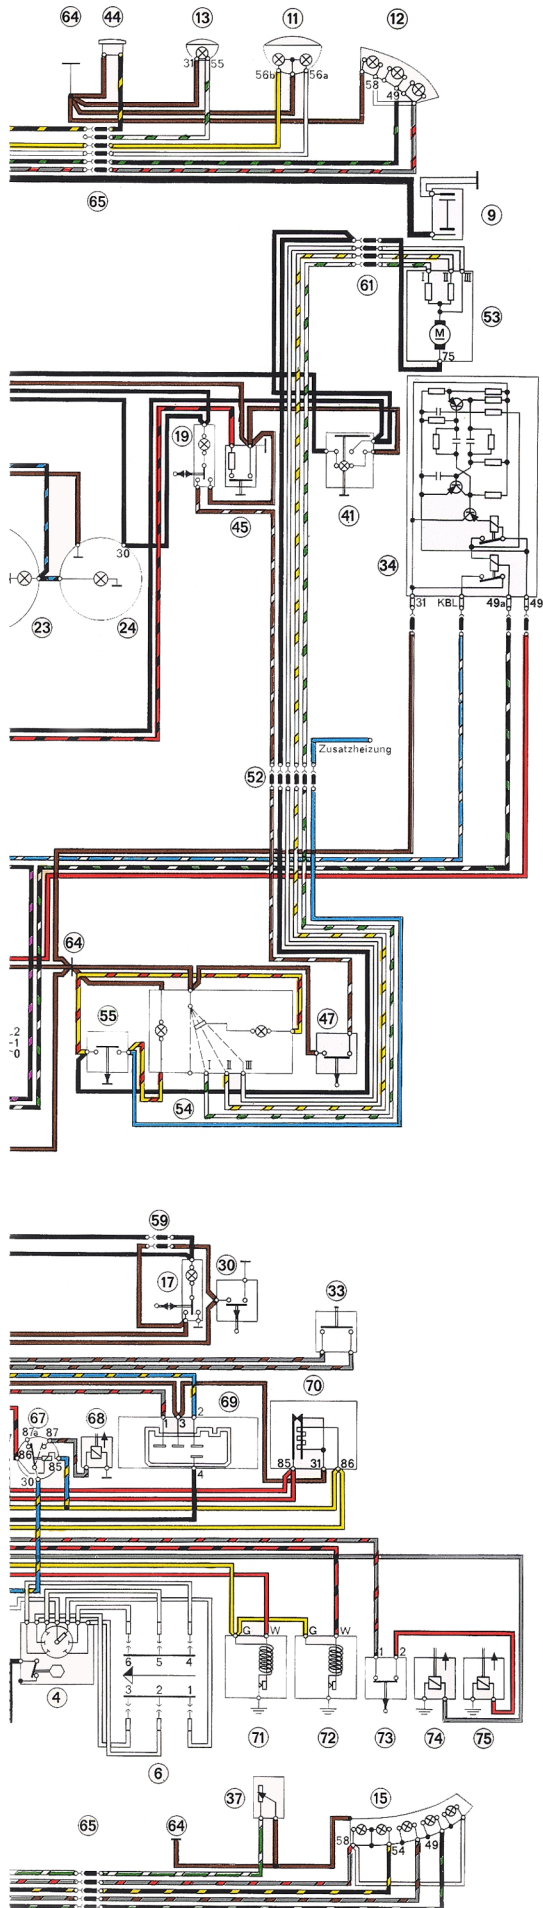

- 1 Starter
- 2 Generator
- 3 Regulator
- 4 Distributor
- 5 Ignition coil
- 6 Spark plugs
- 7 Fuel pump
- 8 CDS oscillator
- 9 Battery
- 10 Switching SCR
- 11 Headlamps
- 12 Blinker, parking and side marker lights (side marker USA only)
- 13 Fog lamps (special order)
- 14 Fog tail lamp (special order)
- 15 Tail, stop, blinker, backup and side marker lights (side marker USA only)
- 16 License plate lights
- 17 Interior light
- 18 Luggage compartment light
- 19 Glove compartment light
- 20 Small instrument cluster
- 21 Large instrument cluster
- 22 Transistorized tachometer
- 23 Speedometer
- 24 Electric clock
- 25 Blinker, dim, headlamp flasher, wiper, washer switch with horn button in steering wheel
- 26 Ignition/starter switch in steering column lock
- 27 Light switch
- 28 Brake failure warning switch (USA only)
- 29 Handbrake control lamp
- 30 Door contact switch
- 31 Stoplight switch
- 32 Luggage compartment light switch
- 33 Backup light switch
- 34 Blinker flasher
- 35 Oil temperature sender
- 36 Fuel gauge sender
- 37 Oil level sender
- 38 Diaphragm oil pressure sender
- 39 Headlamp flasher relay switch
- 40 Wiper motor
- 41 Rear window heating switch
- 42 Rear window heating circuit
- 43 Washer pump
- 44 Signal horn
- 45 Cigarette lighter
- 46 Emergency blinkers
- 47 Glove compartment light switch
- 48 Blower/heater relay switch
- 49 Cigarette lighter relay
- 50 Signal horn relay
- 51 Rear window heating relay switch
- 52 Multiple-pole connector
- 53 Blower motor
- 54 Blower and heater switch
- 55 Gasoline heater switch (special order)
- 56 Rear fuse box
- 57 Fuse box I
- 58 Fuse box II
- 59 Two-pole connector
- 60 Terminal bar
- 61 Multiple-pole connector
- 62 WECO-connector
- 63 Single-pole connector
- 64 Ground taps
- 65 Terminal connectors
- 66 Starting relay switch
- 67 Auxiliary starting relay switch (standard)
- 68 Starting solenoid
- 69 RPM transducer
- 70 Time limit switch
- 71 Temperature switch (start)
- 72 Temperature switch (start assist)
- 73 Microswitch (throttle linkage)
- 74 Shut-off solenoid (start)
- 75 Shut-off solenoid (stop)

## Fuses:

### Fuse box I

- 1 (Electric window regulator)
- 2 (Electric window regulator)
- 3 Cigarette lighter, electric clock
- 4 Windshield wipers and washer
- 5 Hazard warning light
- 6 Stop light, blinkers backup lights
- 7 Blinker, LH
- 8 Blinker, RH

### Fuse box II

- 1 High beam, LH
- 2 High beam, RH
- 3 Low beam, LH
- 4 Low beam, RH
- 5 Parking light, LH
- 6 Parking light, RH
- 7 License plate light, trunk light
- 8 (Sunroof)

### Rear fuse box

- Shut-off solenoid (start)
- (Rear window wipers)
- Shut-off solenoid (stop)
- Rear window heating circuit

### Earth leads or cables:

- Battery-body
- Transmission-chassis
- Supporting plate-body
- Fuel spout-body
- Steering column control switch-body
- Instruments-body

### ATTENTION!

Disconnecting of battery with running engine results in immediate destruction of alternator.